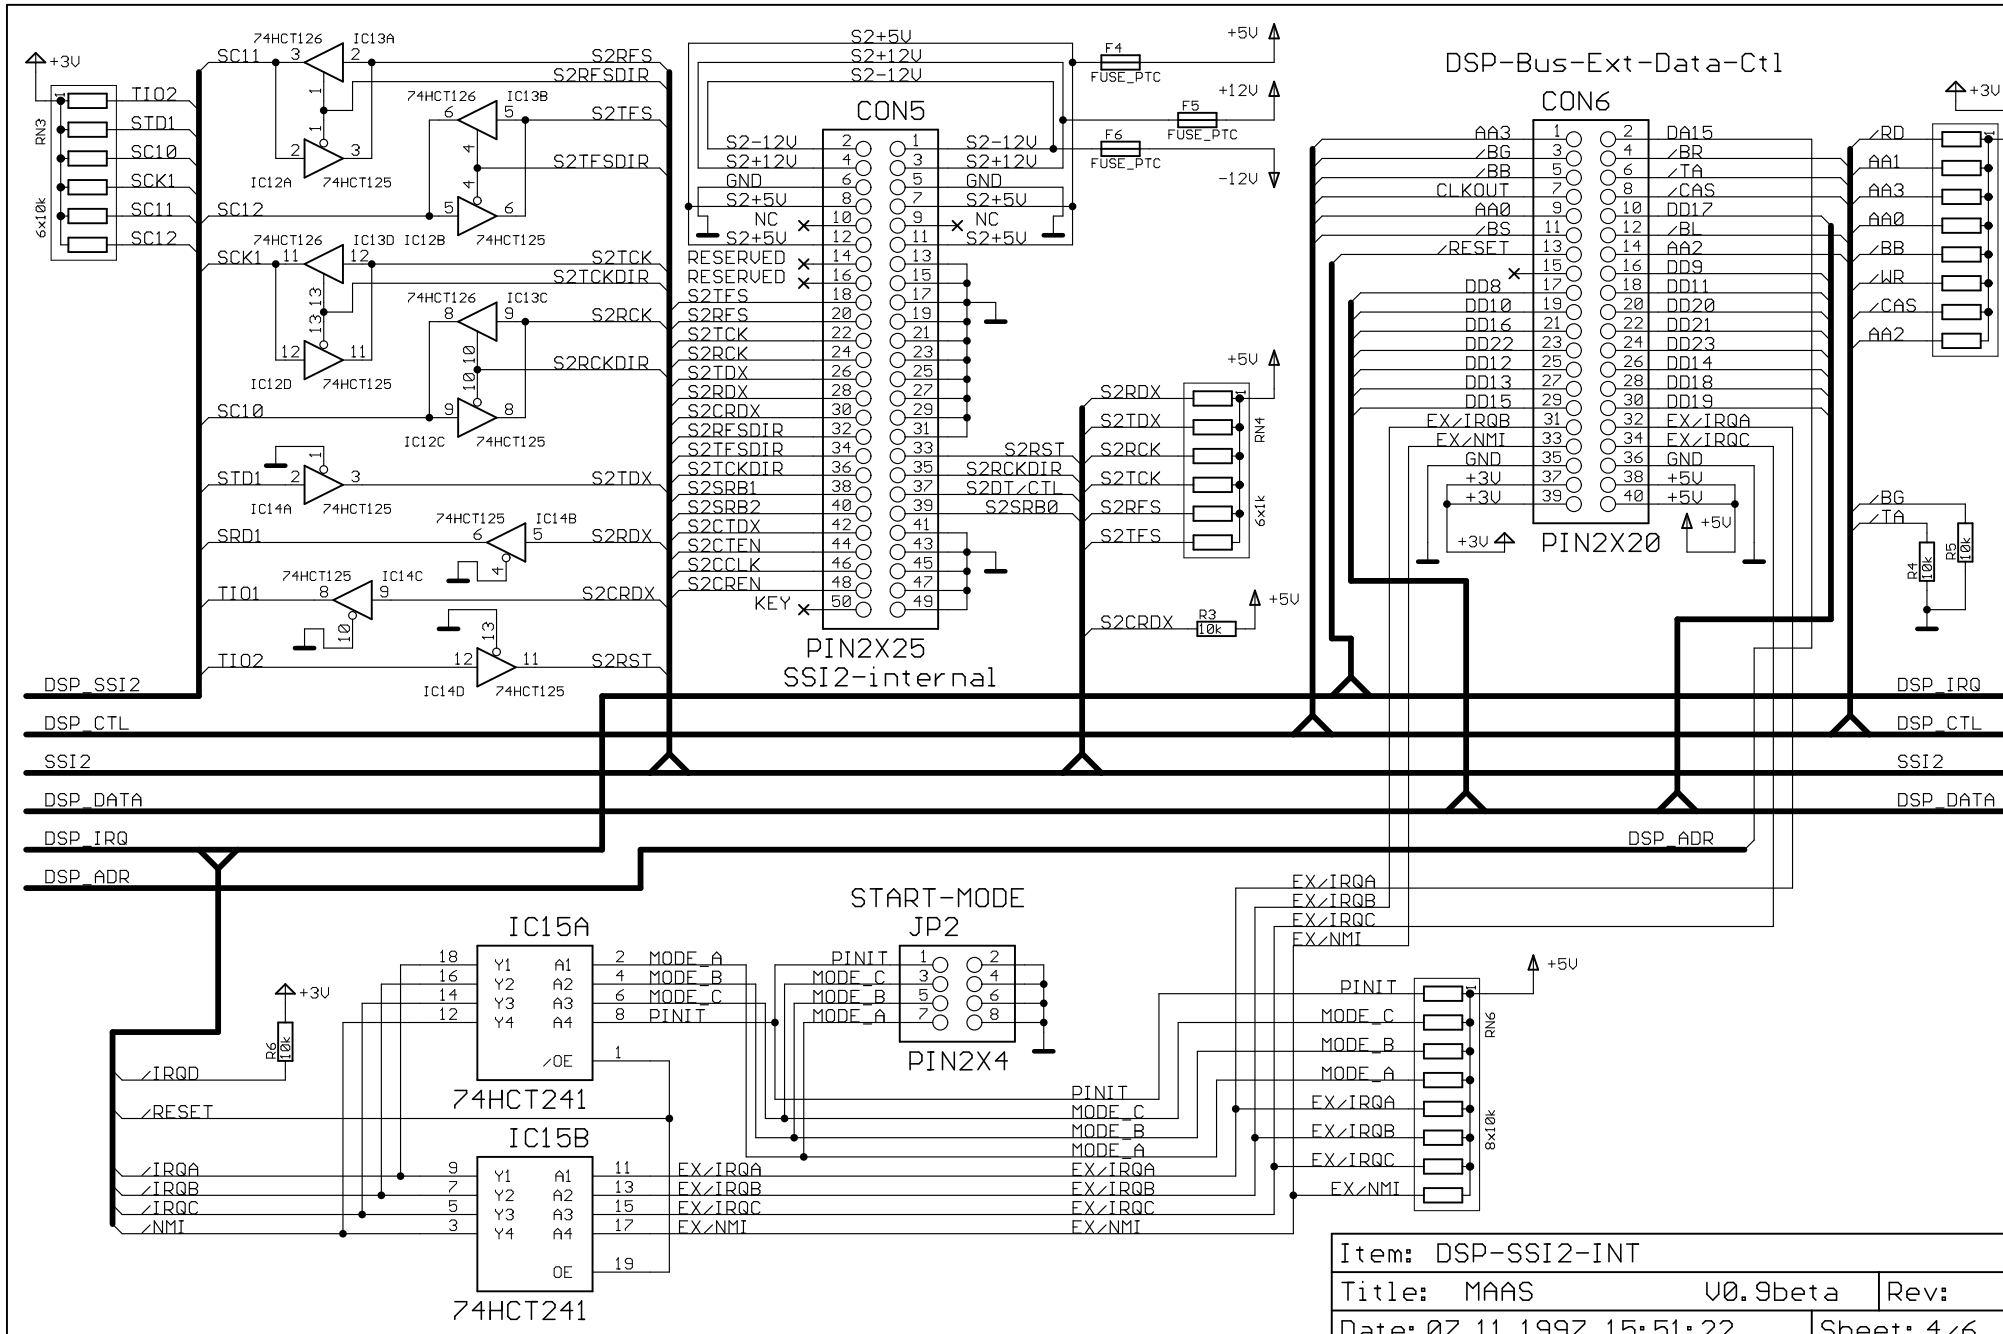
DSP-Bus-Ext-Data-Ctl
CON6
PIN2X20
CON5
PIN2X25
SSI2-internal
START-MODE
JP2
PIN2X4
IC15A
IC15B
74HCT241
74HCT126
74HCT125
DSP_SSI2
DSP_CTL
SSI2
DSP_DATA
DSP_IRQ
DSP_ADR
S2RFS
S2RFSDIR
S2TFS
S2TFSDIR
S2TCK
S2TCKDIR
S2RCK
S2RCKDIR
S2TDX
S2RDX
S2CRDX
S2RST
S2RDX
S2TDX
S2RCK
S2TCK
S2RFS
S2TFS
S2RCKDIR
S2DT/CTL
S2SRB0
S2CRDX
R3
10k
F4
FUSE_PTC
F5
FUSE_PTC
F6
FUSE_PTC
+5V
+12V
-12V
+3V
RN3
6x10k
RN4
6x1k
RN5
8x10k
RN6
8x10k
R4
10k
R5
10k
R6
10k
/RD
/BR
/TA
/CAS
/BL
/WR
/BG
/TA
/IRQD
/RESET
/IRQA
/IRQB
/IRQC
/NMI
EX/IRQA
EX/IRQB
EX/IRQC
EX/NMI
MODE_A
MODE_B
MODE_C
PINIT
Item: DSP-SSI2-INT
Title: MAAS V0.9beta
Rev:
Date: 07.11.1997 15:51:22
Sheet: 4/6